



ZOSYNC

User's Manual

Ver. 191227

ZALMAN
COOL INNOVATIONS

1. Software



- ① Configure : Change settings
- ② SYSTEM INFO : System temperature information
- ③ GPU : GPU temperature
- ④ HDD/SSD : HDD/SSD temperature

2-1. Pattern Mode



- ① Brightness : Adjust brightness of LED
- ② Direction : Change the direction of LED rotation
- ③ Speed : Change the speed of LED lights
- ④ All Speed : Change the speed of all LED lights
- ⑤ Change RGB Sync Mode

(1) How to change modes

("Sync Mode" is default setting)

Clicking on the "SYNC MODE" button will change your setting to "Default"



Clicking on the "Default" button will change your setting to "SYNC MODE"



※ Default: Setting will automatically change your pattern to "Rainbow Wave".

(If you change your pattern, it will automatically change the mode to "SYNC MODE")

2-2. How to change your pattern



- ① Choose your section
- ② Choose your pattern
- ③ Click "APPLY"

Example 1)

Section#1/#2

► 1 or 8 channels (Fans) can be added.

You can divide 4 Channels (Fans) on each section as indicated in the sample picture.

2-3. Checking your channel



- ① Place your cursor on the desired fan to check on channel number.



2-4. Add/Remove Fan




① Click to select the fan you want to remove.

② Click "Remove"

(1) You can add a fan by selecting a fan from the drop-down menu.

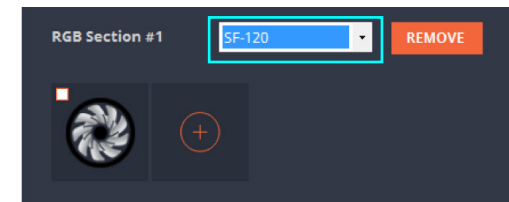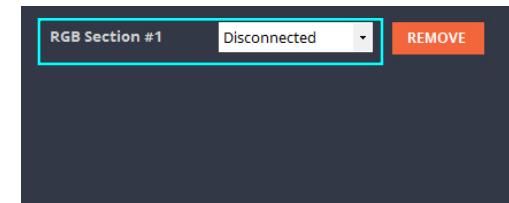

(2) Click "+" to add more fans
(choose a different fan to add a different kind)

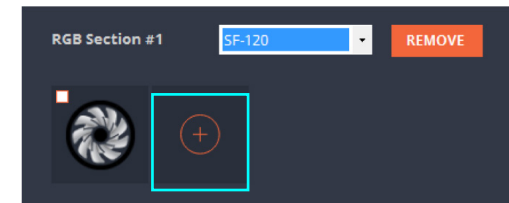

③ Click "APPLY"

2-5. Replacing fans with a different model



① Select a fan in the whole section you want to change.


② Choose the desired fan from the drop menu

※A section can ONLY accommodate a single model of Fan



③ Click “APPLY”

3. Custom Mode (Updated on future versions)

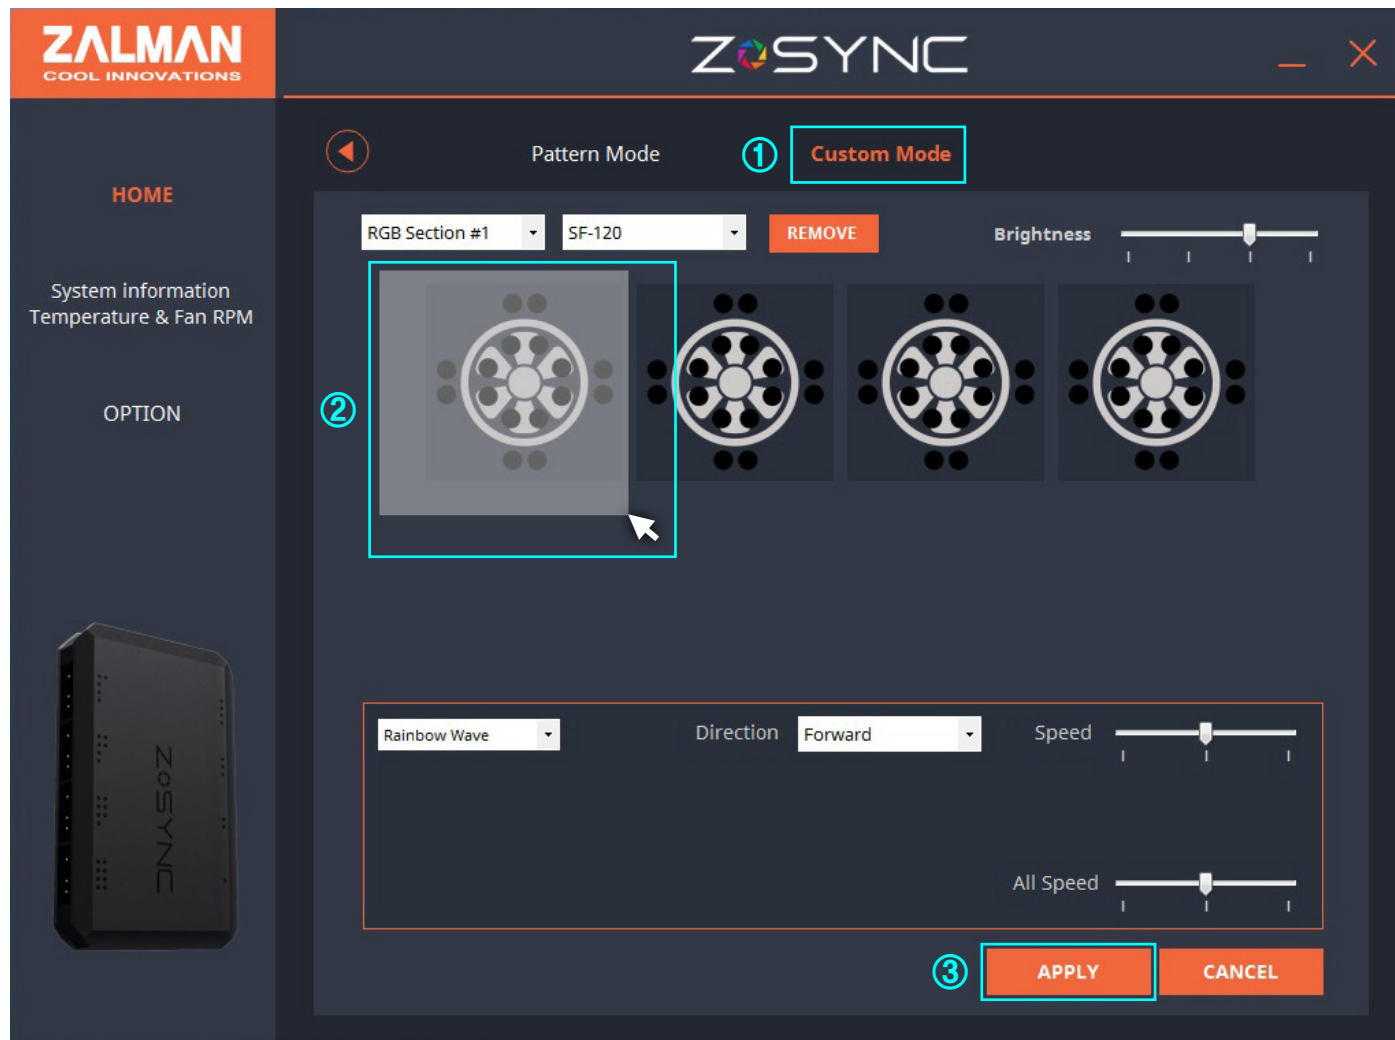

① Click on “Custom Mode”


② Choose LEDs you want to control

(1) Click and Drag the selection on LEDs.

③ Click “APPLY”

※ Please check www.zalman.com to find out more about the update.

4. System information : Temperature & Fan RPM

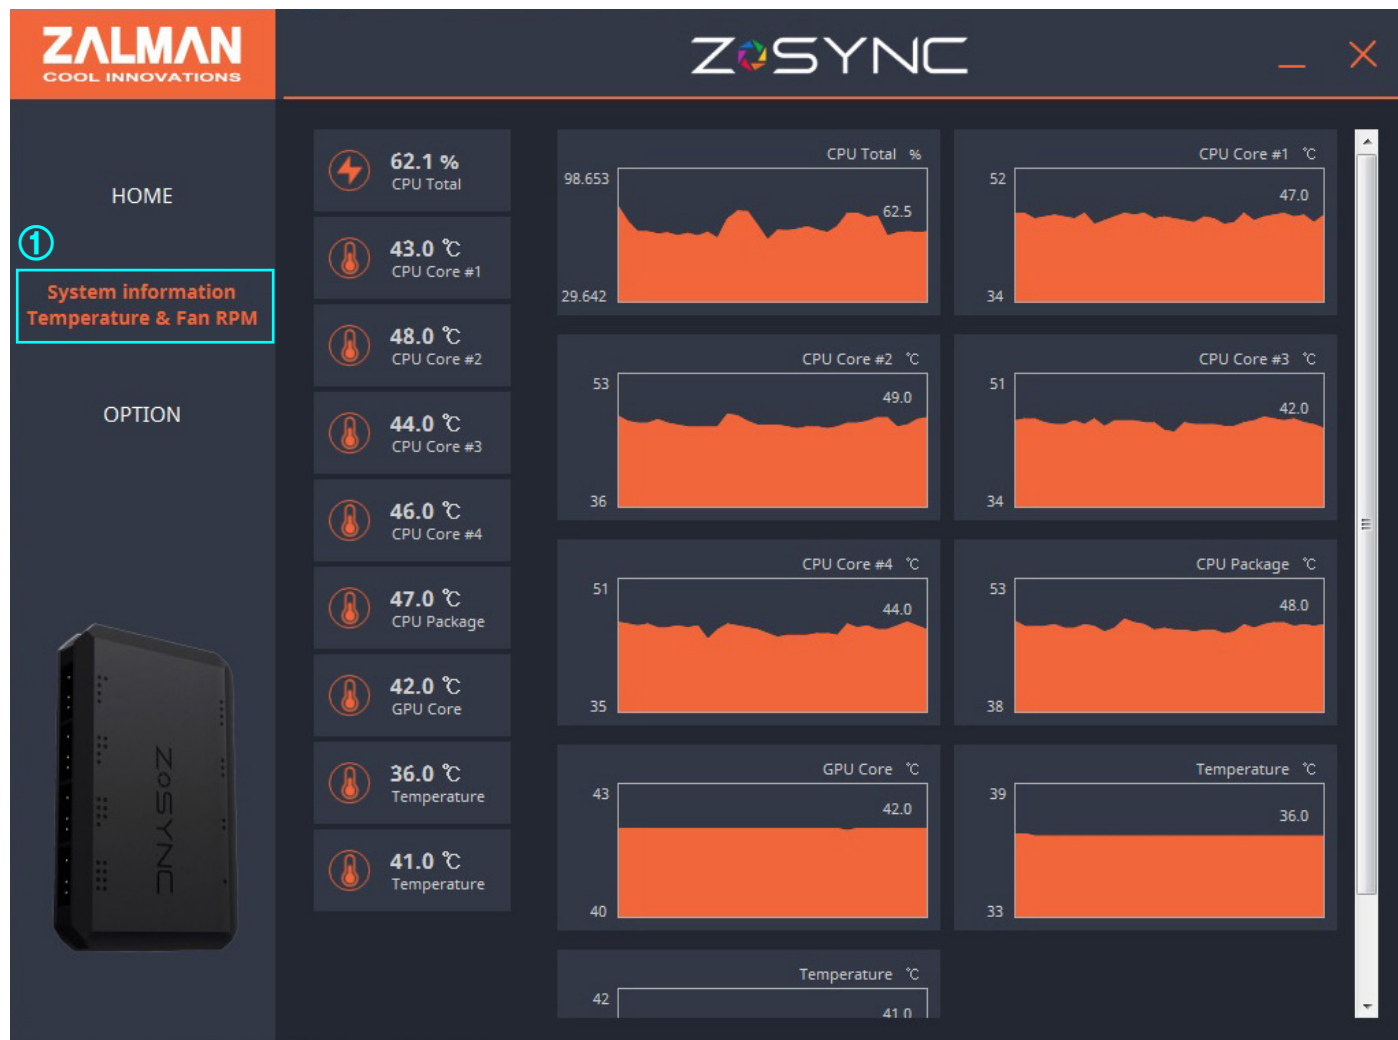

① System and GPU Temperature

※ SSD & HDD temperature will be updated in subsequent versions.

5. Options



① Version

(1) Software Version Information

(2) Firmware Version Information

(3) Click on "Check for updates" to update on Z- S Ync software.

6. Sync with Chroma




Maximize your unfair advantage with Razer Synapse 3, the unified hardware configuration tool that takes your Razer device to the next level. Get access to advanced options and granular control as you rebind buttons, assign macros, personalize device lighting and more.

Download Now >

for Windows 10, Windows 8, Windows 7


- ① Install Razer Synapse3 from the Razer website.
<http://www.razer.com/synapse-3>
- ② Click on “Download Now” to download the software.

6. Sync with Chroma

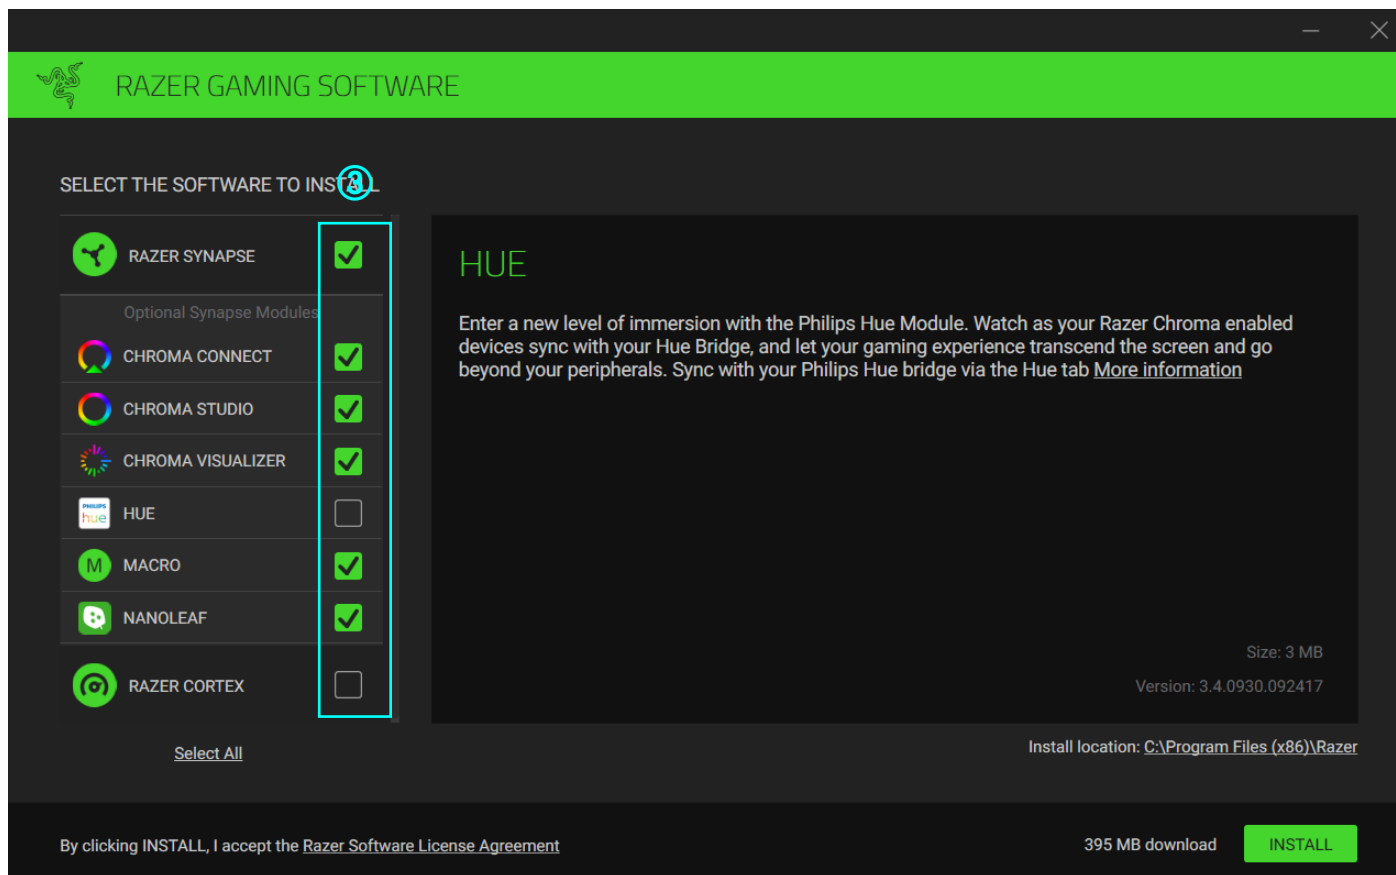

③ Make sure you have selected the correct modules as indicated in the picture. Click on “Install”


6. Sync with Chroma

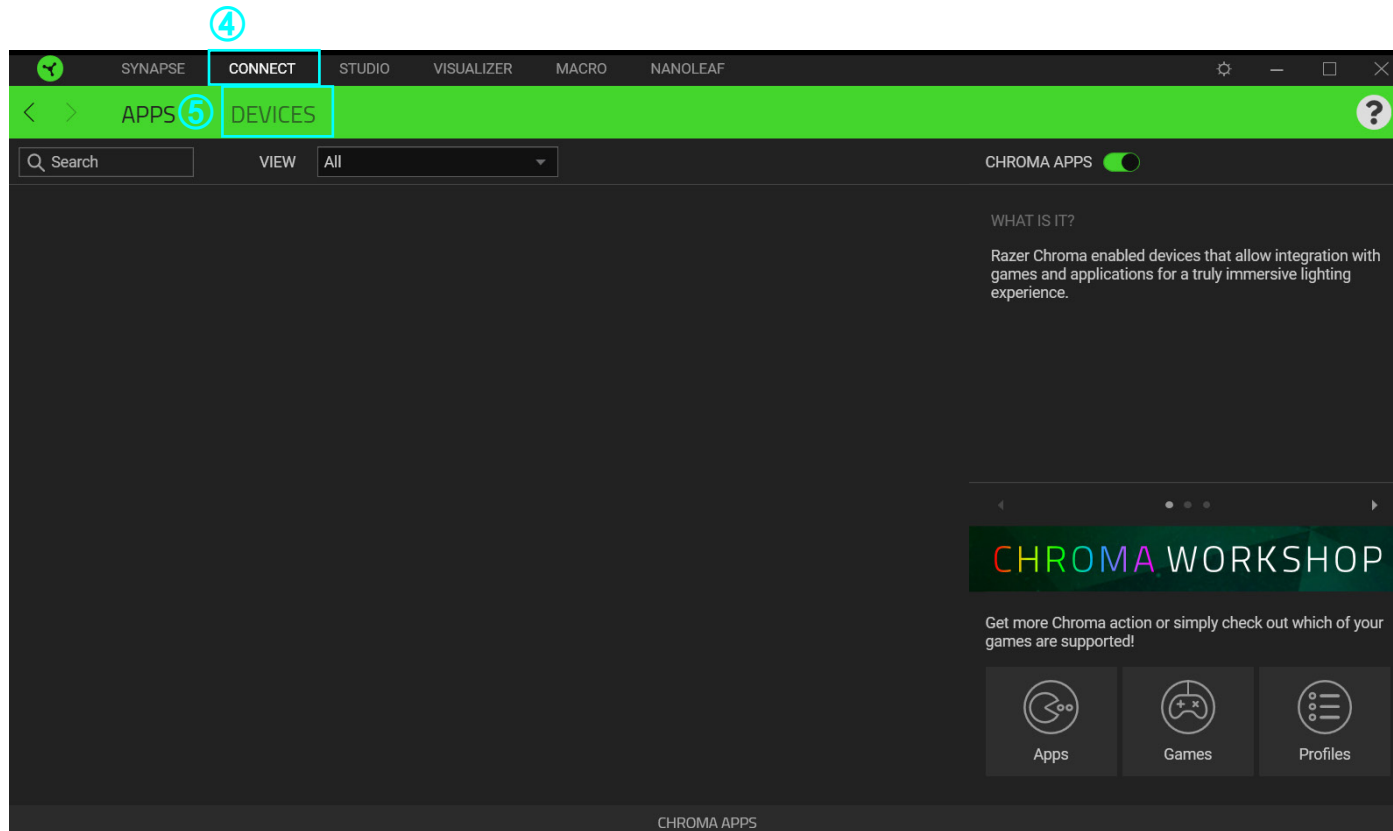

④ Please select “CONNECT” after installation has been completed


⑤ Click on “Devices”

6. Sync with Chroma

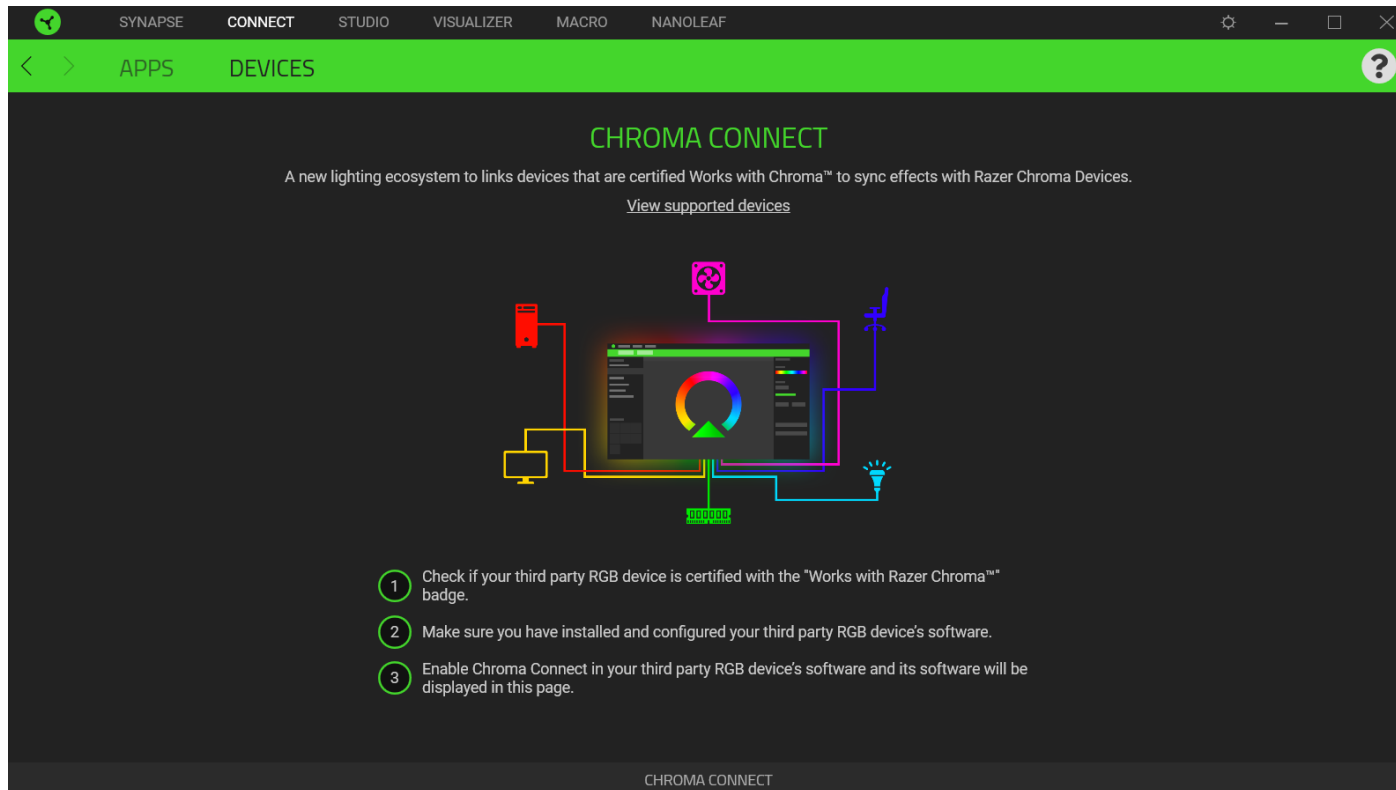

⑥ Chroma connect page should be visible as pictured.


6. Sync with Chroma

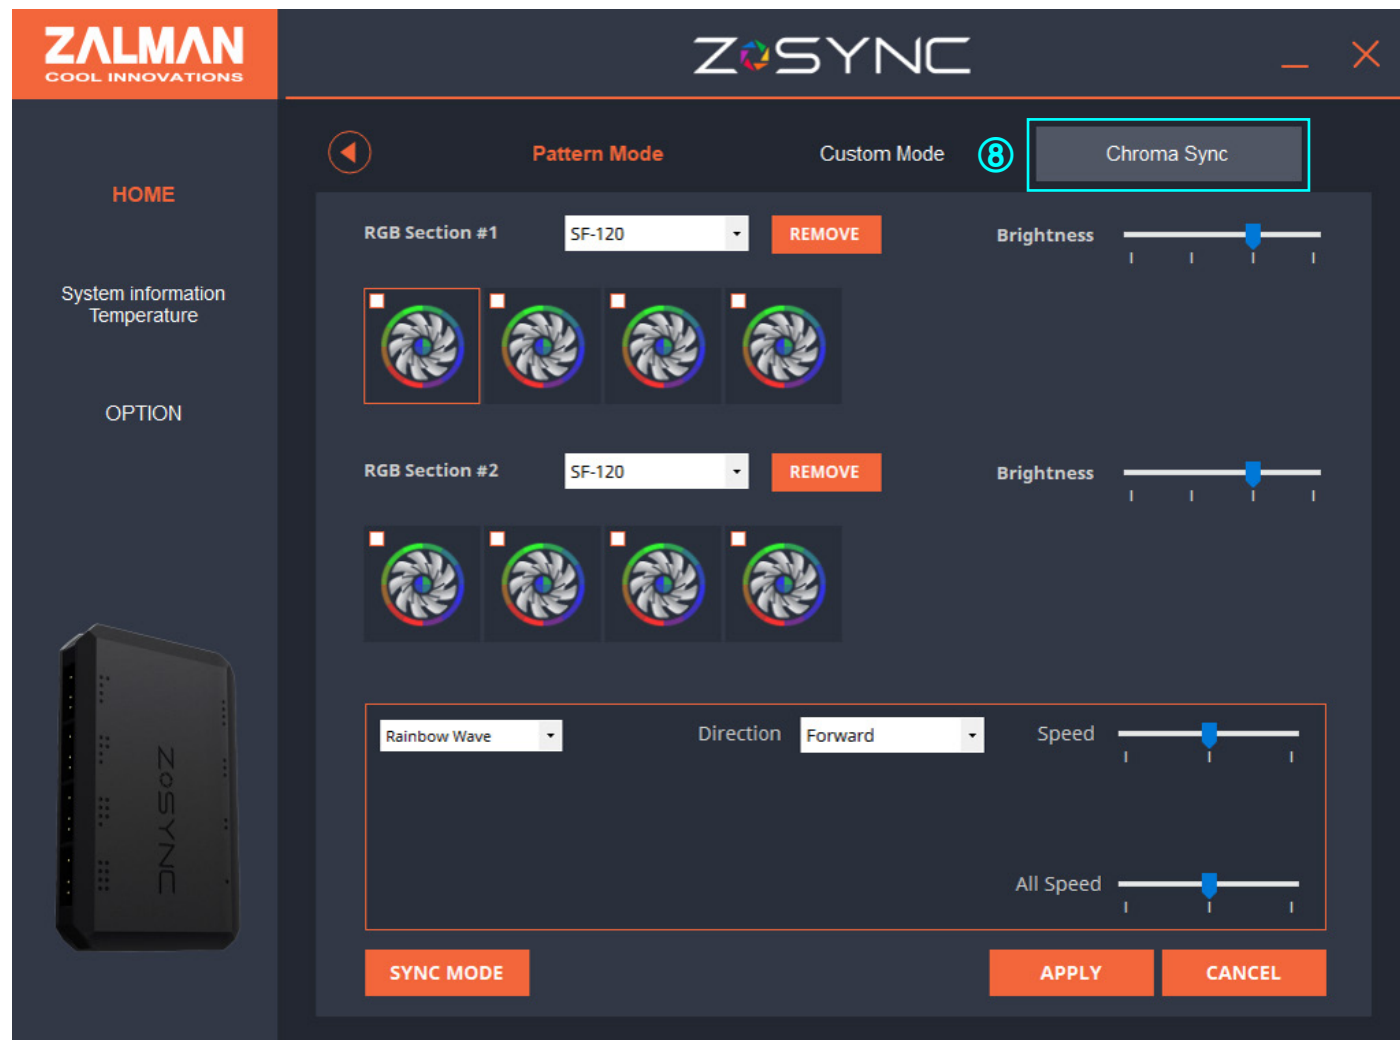

⑦ Run Z-Sync

⑧ Click on “Chroma Sync”

6. Sync with Chroma

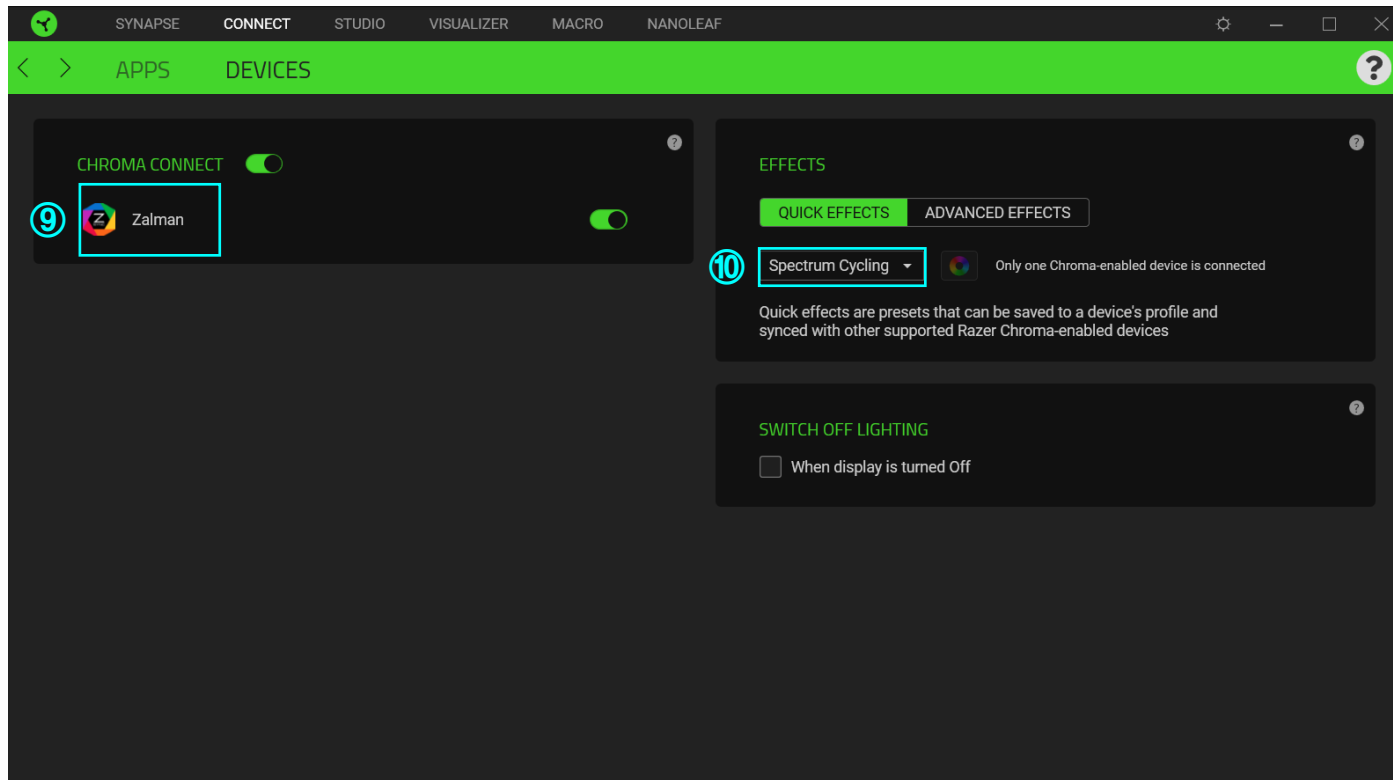

⑨ From Chroma Window you can find “Zalman” under Chroma Connect.

⑩ Please be sure to change patterns from ‘Spectrum Cycling’ to another pattern.
(If you wish to use “Spectrum Cycling” Pattern you will need to choose a pattern and re-select “Spectrum Cycling”)

6. Sync with Chroma



⑪ Chroma pattern effect will be shown on Z-sync software.

ZALMAN
COOL INNOVATIONS



Developed and designed by ZALMAN in Korea.
This product is protected by ZALMAN's pending or registered patents.